### ■ 16-Port/24-Port Gigabit Unmanaged Ethernet Switch

## 16-Port/24-Port Gigabit Unmanaged Ethernet Switch User Manual

### Packing List

Please check the following items after unpacking, if any missing, please contact your local dealer.

Items	Quantity
Switch	1 pc
AC Power Cable	1 pc
Mounting Accessory	1 set
User Manual	1 pc

### **Product Overview**

The product of this series is 16-Port/24-Port


10/100/1000Mbps Gigabit Unmanaged Ethernet Switch.

This series switches provide 16/24 10/100/1000Mbps

Ethernet RJ-45 ports. It can be widely used in video security monitoring systems, network projects, etc.

This series contains two types:


- UTP3316-M0: 16-Port Gigabit Unmanaged Ethernet Switch
- UTP3316-M0: 24-Port Gigabit Unmanaged Ethernet Switch

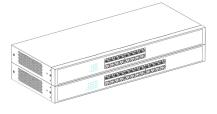

### **Appearances and Dimensions**

16-Port Gigabit Unmanaged Ethernet Switch


### Dimensions (mm)

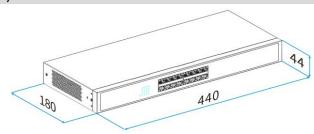

### Front Panel




### Rear Panel

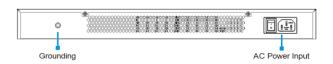


### 24-Port Gigabit Unmanaged Ethernet Switch

# Dimensions (mm)

### Front Panel

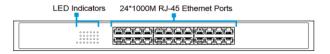

### Rear Panel

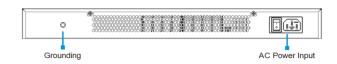


### **Indicators**


Indicators		Status	Descriptions
Power	Power supply indicator	On	Power supply is on
	r ower supply indicator	Off	Power supply is off.
Link/act		On	The port is linking normally.
	Ethernet ports link indicators	Blink	The port is transmitting or receiving data.
		Off	The port links down.

### **Installation Steps**

- Before installation, power off the equipment. Installation when device is powered on is prohibited.
- The switch supports rack mounted and desktop installation. Following with the rack-mounted installation

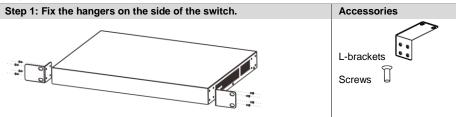

Step 2: Install the switch on the rack. The distance between the devices should be more than 5cm.

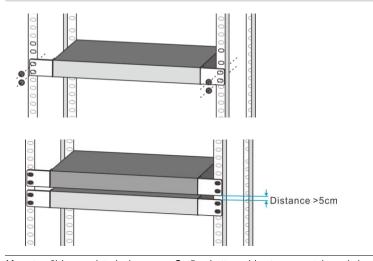

- 3) After step 2) is completed, please use Cat5 or better cables to connect the switch and the device.
- 4) Check the installation and the wiring, after confirming that the connection is correct and reliable, power on the switch.

The installation is completed.

### **CAUTION**

- Power on the system only after confirming that the wiring is correct, to avoid damage to the equipment. It is recommended to use the power adapter and AC power cable to in the package to connect the power
- · For better transmission performance, it is recommended to use Cat5 or better cables to connect the switch and powered devices.
- · For better protection performance, it is recommended always to make the ground connection first and disconnect it at the end when operating the device.
- · Before operating or maintaining the switch, please read the user manual carefully to avoid equipment damage caused by misoperation.

### **Specifications**

Items	16-Port Gigabit Unmanaged Ethernet Switch	24-Port Gigabit Unmanaged Ethernet Switch			
Hardware Specifications					
Downlink Ports	16*10/100/1000 Base-T RJ-45(Auto- MDI/MDI-X)	24*10/100/1000 Base-T RJ-45(Auto- MDI/MDI-X)			
Led Indicators	1*Power, power supply indicator				
	16*Link/Act Indicators	24*Link/Act Indicators			
Dimensions (W*D*H)	440mm*180mm*44mm				
Input Voltage	100~240V AC, 50~60Hz				
Material	Metal shell				
Installation	Desktop/DIN-rail/wall mounted				
Switch Property					
Standards	IEEE 802.3, IEEE 802.3u, IEEE 802.3x, IEEE 802.3ab				
Forwarding Modes	Store and Forward				
MAC Table	8k, support auto learning				
Switching Capacity	32Gbps / non-blocking	48Gbps / non-blocking			
Packet Forwarding Rate	23.8Mpps	35.7Mpps			
Reliability					
Lighting Protection	On power port: line to earth 6kV, line to line 4kV On data port: line to earth 6kV				
Operating	-10°C~45°C, 10%~90% (Non-condensation)				
Storage	-40°C~70°C, 5%~90% (Non-condensation)				

Version: V1.0, updated 2022.4.14.

The information in this document is subject to change without notice.

Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.