

1200M Outdoor High Power Wireless Access Point

Quick Installation Guide


Packing List

Please check the following items after unpacking, if any missing, please contact your local dealer.

Item	Quantity
Access Point	1 pc
Power Adapter	1 set
Antenna	4 pcs
L-type Bracket	1 pc
U-bolt Kit	2 pcs
Screw Set	1 set
RJ-45 Waterproof Kit	1 set
Quick Installation Guide	1 pc

Appearance

Front Panel

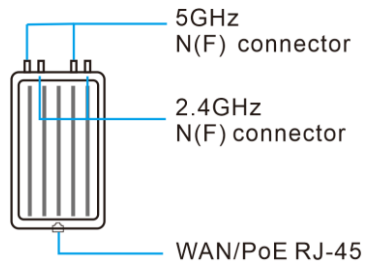


Caution

IMPORTANT SAFETY PRECAUTIONS:


- (1) **LIVES MAY BE AT RISK!** Please be aware of the electrical wires around. Carefully read the section “**OUTDOOR INSTALLATION WARNING**” in the manual before installation.
- (2) Users **MUST complete grounding wired** with the device; otherwise, a sudden lightning could cause fatal damage to the device. **EMD (Lightning) DAMAGE IS NOT COVERED UNDER WARRANTY.**
- (3) Users **MUST power off the device** first before connecting the antenna to it; otherwise, damage might be caused to the device itself.
- (4) The Antenna and Surge Arrestor are required for each antenna connector, and must be purchased separately.

Product Installation

- 1) Install the backplane to the back of the AP.
- 2) Attach the L-type bracket to the backplane and fasten it.
- 3) Place the AP to the pole Anderson fasten it with the U-bolt kit, the AP can be mounted in the pole with a diameter of up to 2.5”.

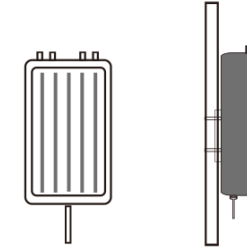

- 4) Attach the surge arrestors to each antenna connector.
- 5) Attach the antenna equipped with N (M) connector to each surge arrester. Otherwise, connect the antenna through the N (M-pin) to N (M-pin) cable.
- 6) Plug the RJ-45 Ethernet cable into the PoE port of the AP through the waterproof kit, and plug the other side of the RJ-45 cable into the PoE device to finish the installation. Please remember to finish grounding by consulting the local electrical experts.

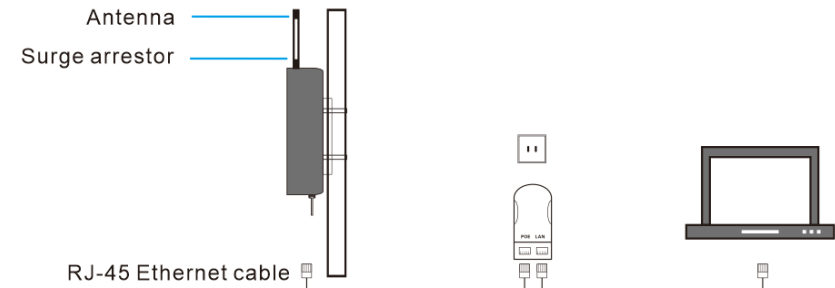

Configuration

PC connect AP by wireless (SSID: Wireless 2.4G_XXXXXX, Key: 66666666) or wire.
 Set PC network IP to 192.168.188.X(X: 2~200), same network segment as AP, subnet mask: 255.255.255.0


Wireless:




Wired:



Set static IP for PC:

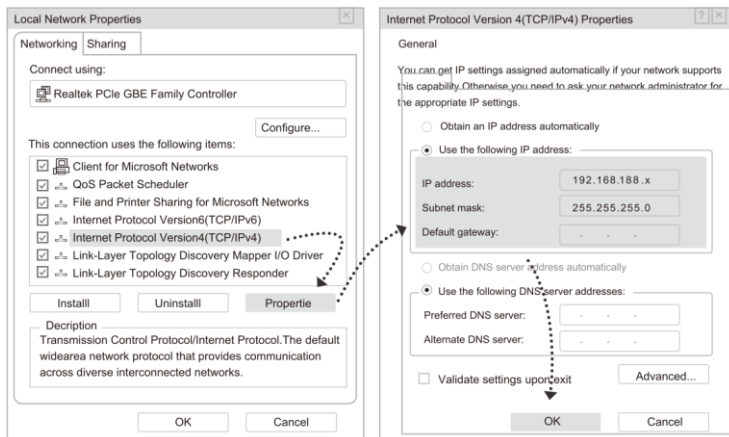

Use browser to access <http://192.168.188.253>, pop up the login page, input the login password: admin, and enter into the home page.

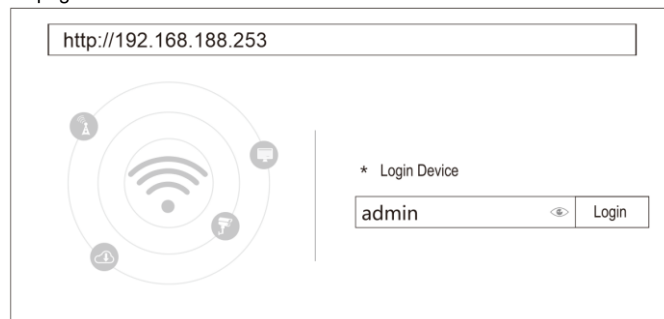

Version: V1.0, updated 2023-04-27.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.